

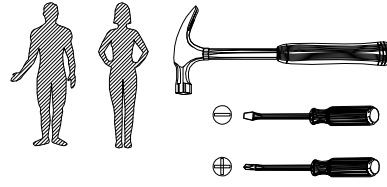
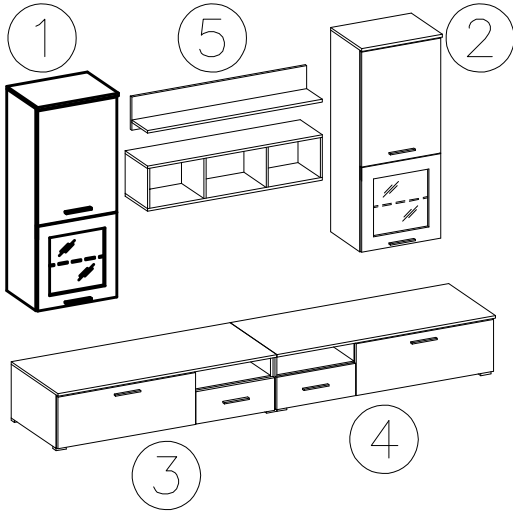


FRANCO



①

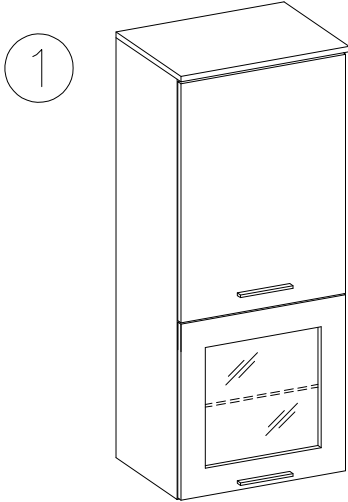







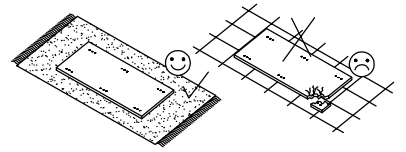





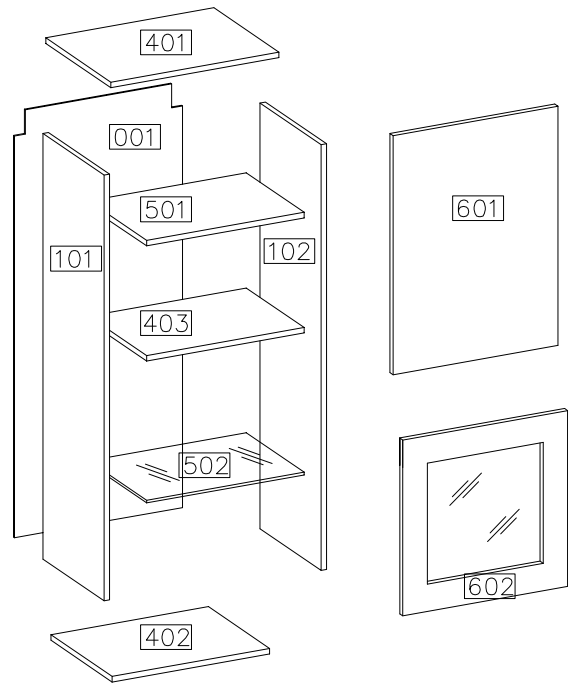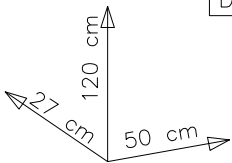


#	ART. NR	QUANTITY
1	401	1
2	402	1
3	403	1
4	101	1
5	102	1
6	501	1
7	502	1
8	601	1
9	602	1
10	001	1






DOOR LEFT
DRZWI LEWE







 D1	 C	 E	 A	 L	 P1	 J6	 H4	 G6
6	6	6	12	10	8	8	4	4
 S1	 R2	 K8	 R3	 K9				
2	4	2	4	2				








1

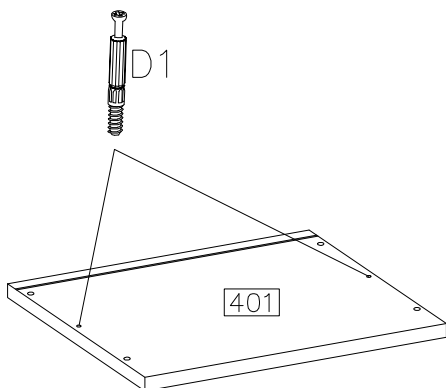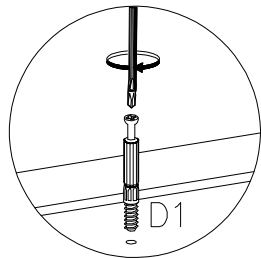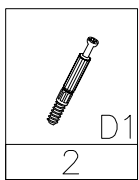





2

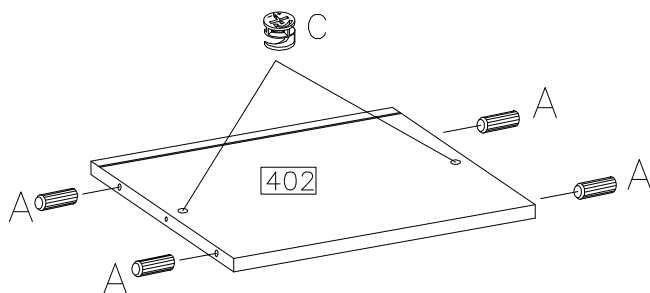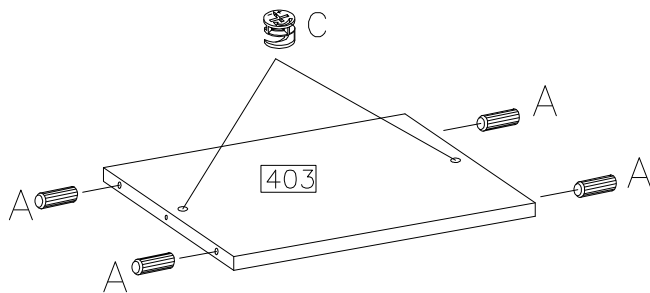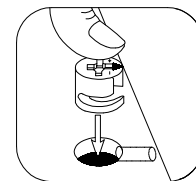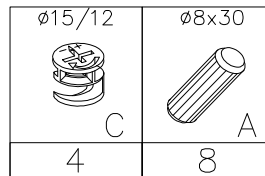





3

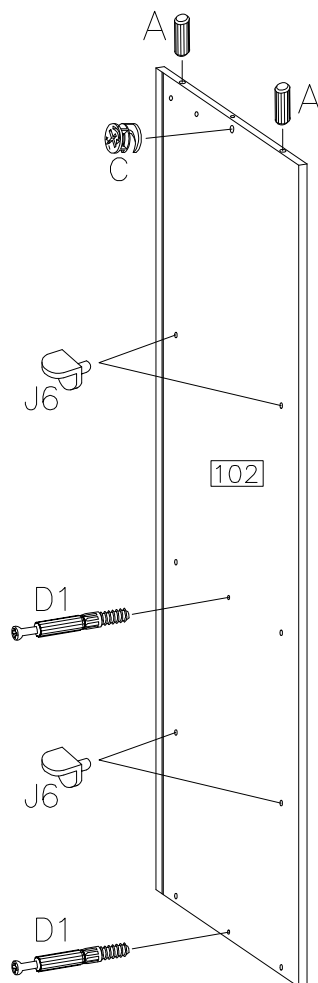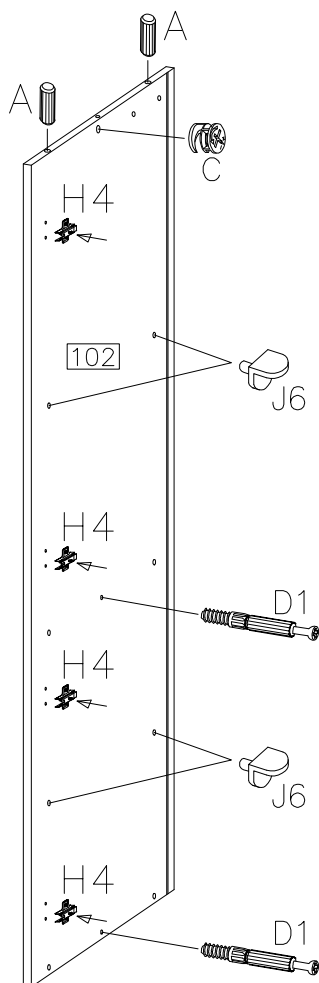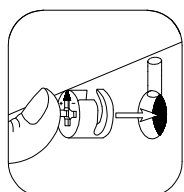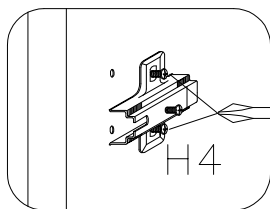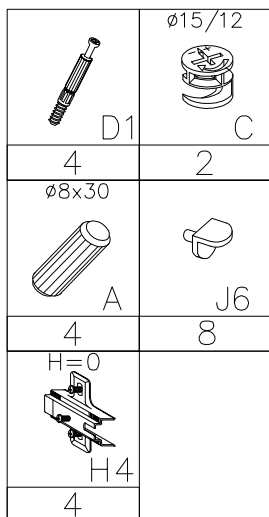





4

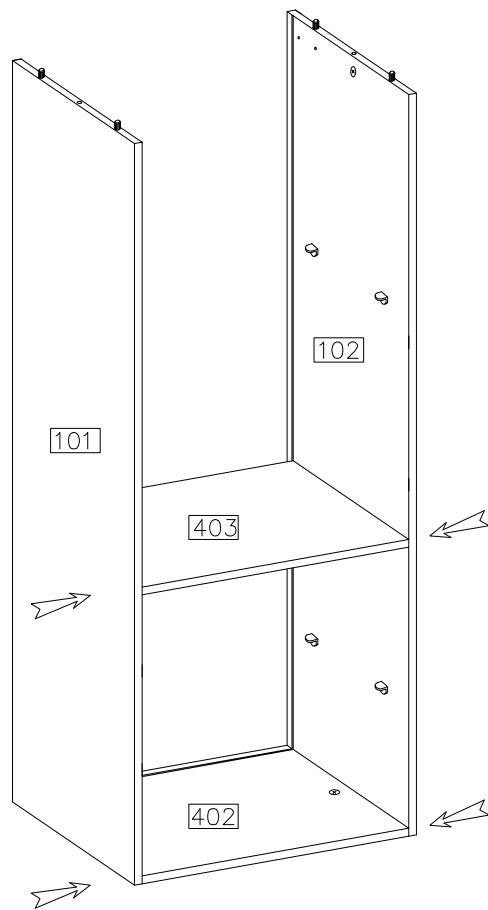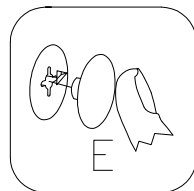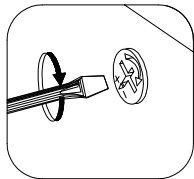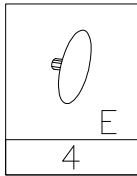






5

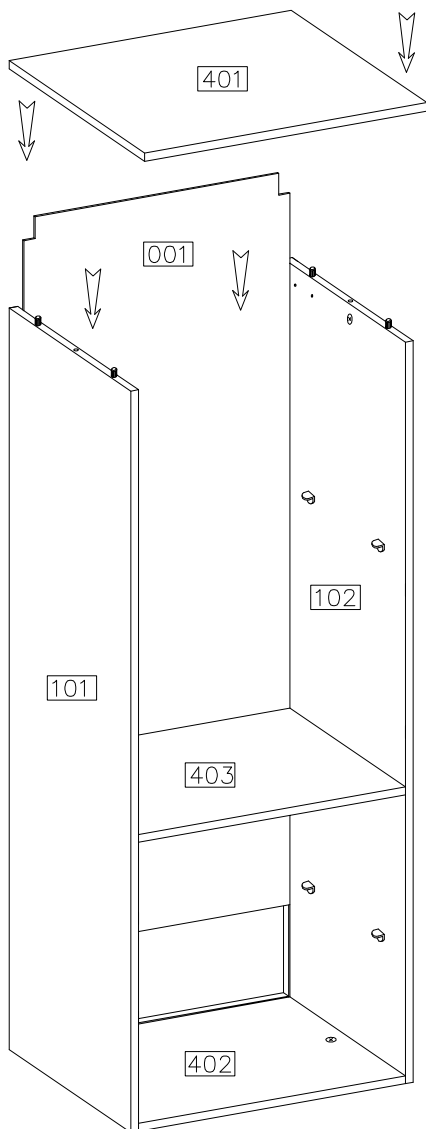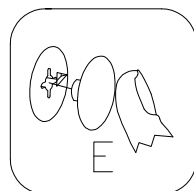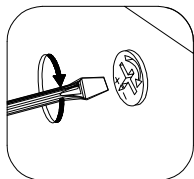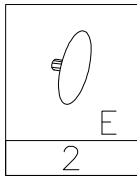


6

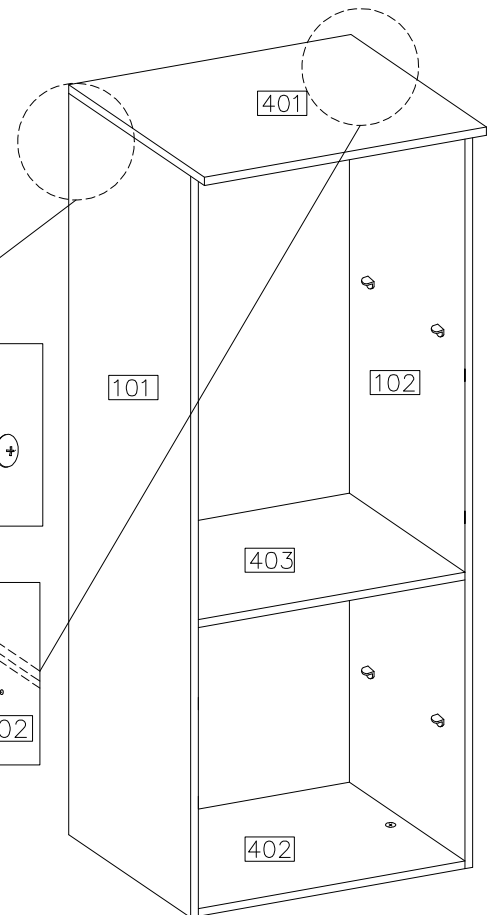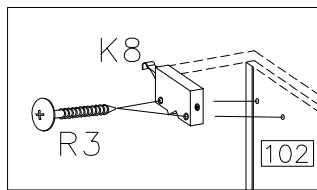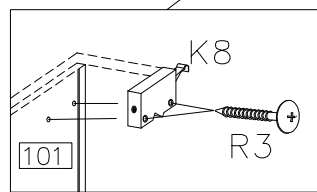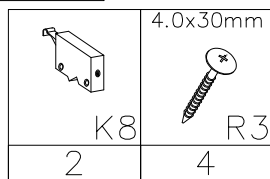

7

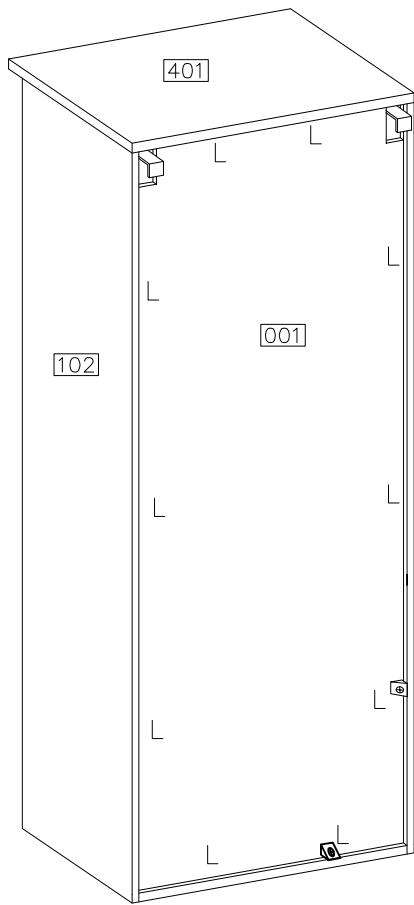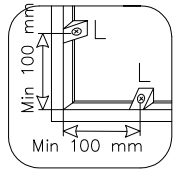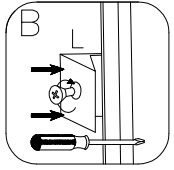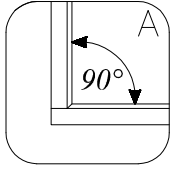
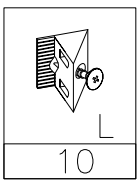


8

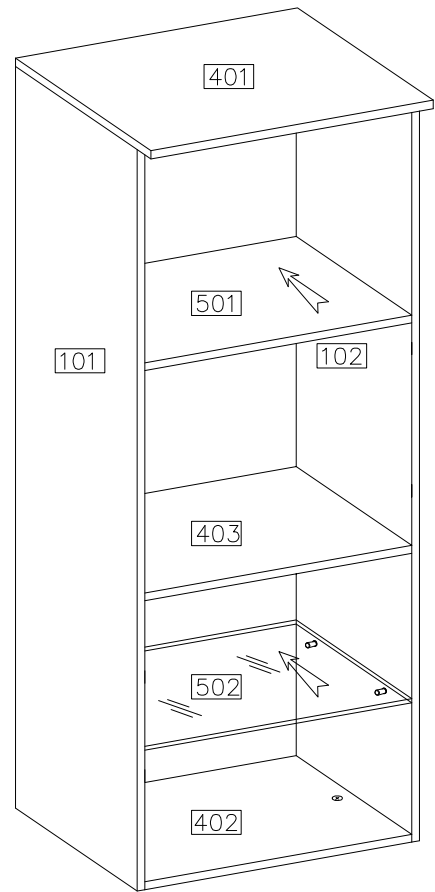




9
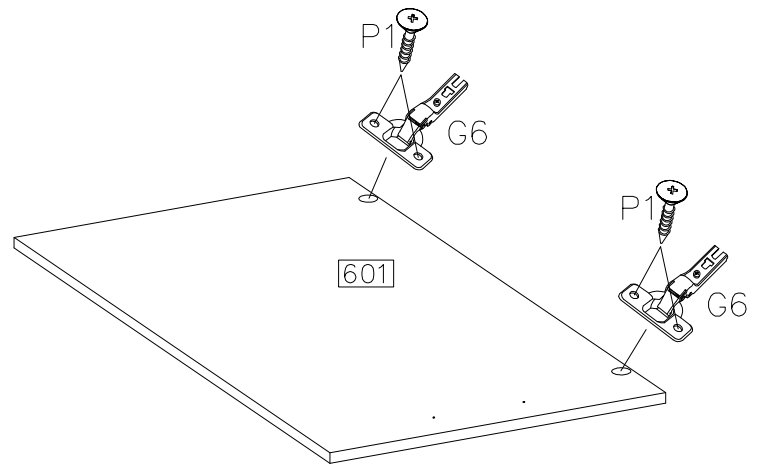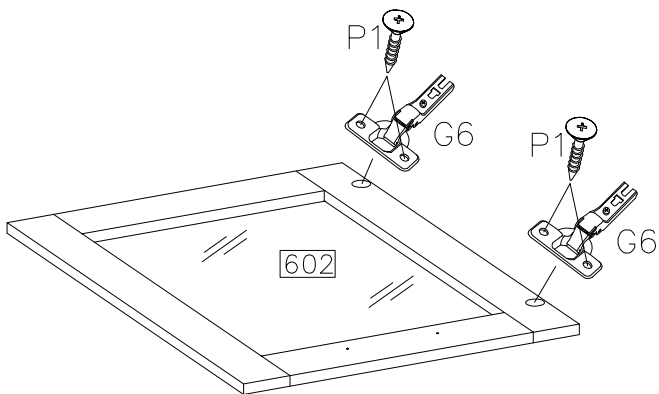
<p>∅35/KR-0 G6 4</p>	<p>4.0x16mm P1 8</p>
------------------------------	------------------------------



10

		4.0x27mm 
K9	S1	R2
2	2	4

UWAGA!
KOŁKI ROZPOROWE
DO MONTAŻU SZYNY NA ŚCIANIE
NIE SĄ ZAWARTE W OKUCIACH

